





Wiring configurations for BLY34 Series – Brushless DC Motor

| Connection          | Lead Wire Connection        | Lead Wire Color                        |
|---------------------|-----------------------------|--|
| Star Configuration  | Phase A                     | Yellow                                 |
|                     | Phase B                     | Red                                    |
|                     | Phase C                     | Black                                  |
|                     | Connect Wires with Wire Nut | Yellow/White & Red/White & Black/White |
|                     |                             |  |
| Delta Configuration | Phase A                     | Yellow & Black/White                   |
|                     | Phase B                     | Red & Yellow/White                     |
|                     | Phase C                     | Black & Red/White                      |

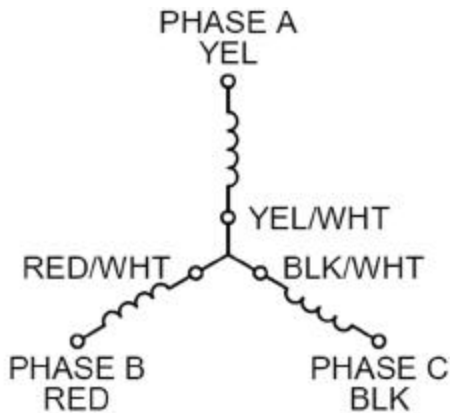

STAR CONFIGURATION

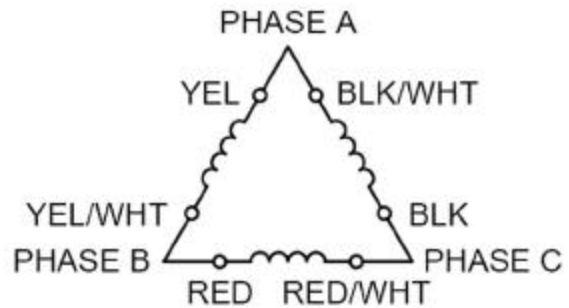

DELTA CONFIGURATION

NOTE:

1. STAR CONFIGURATION IS DEFAULT.
2. FOR DELTA CONFIGURATION:  
 REMOVE PLASTIC CAP.  
 REMOVE 3 SCREWS HOLDING PCB.  
 ROTATE HALL PCB TO LINE UP WITH RED MARKER, REPLACE SCREWS.  
 REPLACE PLASTIC CAP.