

# DPBHV001, DPZHV002 High Voltage Step Motor Driver

## User's Guide



**ANAHEIM AUTOMATION**

910 East Orangefair Lane, Anaheim, CA 92801  
e-mail: [info@anaheimautomation.com](mailto:info@anaheimautomation.com)

(714) 992-6990 fax: (714) 992-0471  
website: [www.anaheimautomation.com](http://www.anaheimautomation.com)

## Features

- Integrated BLHV, 440W Power Supply, and Cooling Fan
- Bilevel Driver Operation
- 90-265 VAC Input
- 10 Amps per Phase Operating Current (Kick Current)
- 7 Amps per Phase Standstill Current
- 95 Volt Operation
- Short Circuit Protection
- Open Circuit Protection
- Unipolar Operation
- Motor ON/OFF Input
- Half-Step and Full-Step Operations
- Fault LED and Fault Output
- Detachable Terminal Block
- Compact and Rugged

## What Is a Step Motor Driver?

A step motor driver is a device that takes input signals (usually Clock and Direction) and translates this information into phase currents in the motor. Each time the step motor driver receives a pulse, the step motor moves one step. If the driver receives 200 pulses, the motor moves 200 steps. The motor steps at the same frequency as the clock pulses.

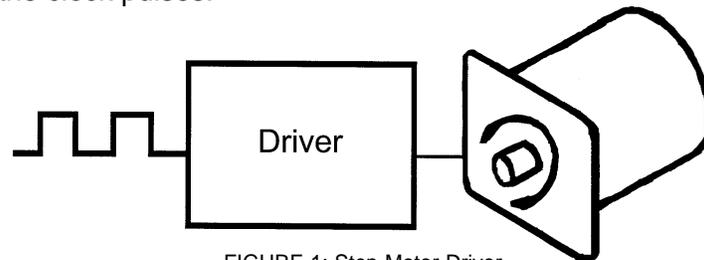


FIGURE 1: Step Motor Driver

## General Description

The BLHV is a step motor driver that can drive motors rated from 1 to 7 amps/phase (unipolar rating). It can handle 6-lead and 8-lead motors. This driver features a unipolar bilevel (or dual voltage) drive technique with short and open circuit protection (with a Fault LED and Fault Output).

## Bilevel Drive

The basic function of a motor driver is to provide the rated motor phase current to the motor windings in the shortest possible time. The bilevel driver uses a high voltage to get a rapid rate of current rise in the motor windings in the least amount of time. When reaching the preset trip current, the driver turns off the high voltage and sustains the current from the low voltage supply.

## Half-Step/Full-Step

Users have a choice of full-step operation or half-step operation. Full-step operation occurs by energizing two phases at a time, rotating a typical motor 1.8 degrees per step. Half-step operation occurs by alternately energizing one, and then two, phases at a time, rotating the motor 0.9 degrees per step. Full-step operation is suggested for applications that specifically require that mode, such as when retrofitting existing full-step systems.

## Clock Modes

The BLHV has two clock options: Clock and Direction, or Dual Clock operation. Jumper JP2 is used to select the clock option. Basically JP2 selects Terminal 5 as either the Direction input or the CCW input. With the Clock and Direction option (most common option), clock pulses applied to the Clock input (Terminal 6) cause the motor to step. The direction of the motor is determined by the logic level of the Direction input (Terminal 5). Jumper JP2 must be in the "2-3" position for this mode (see Figure 4 and Table 1).

With the Dual Clock option, clock pulses applied to the Clock input (Terminal 6) cause the motor to step in the clockwise direction. Clock pulses applied to the CCW input (Terminal 5) cause the motor to step in the counterclockwise direction. Jumper JP2 must be in the "1-2" position for this mode.

Either positive or negative going pulses may be used by setting jumper JP1 in the appropriate position (see Table 1). To determine which setting to use, first consider the type of clock pulse output on the pulse generator or indexer (controller). If the clock output on the controller is open-collector type (sinking), then use the negative going jumper setting (JP2 must be in the "1-2" position). If the clock output on the controller is a pnp or p-channel (sourcing) type, then use the positive going jumper setting (JP2 must be in the "2-3" position). If the clock output on the controller is a TTL/CMOS type (totem pole), then either setting will work; but the jumper setting should be chosen based on the level of the clock output when the controller is not pulsing. If the clock is low when not pulsing then use positive going jumper settings. If the clock is high when not pulsing then use negative going jumper setting.

The clock inputs (Clock and CCW) are pulled up to +5VDC through a 10K ohm resistor for negative going clock inputs; they are pulled down to 0VDC through a 10K ohm resistor for positive going clock inputs. The pullups/pulldowns are followed by an RC filter. See Figure 2 and Figure 3.

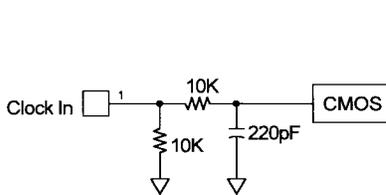


Figure 2: Positive Going Clock Input


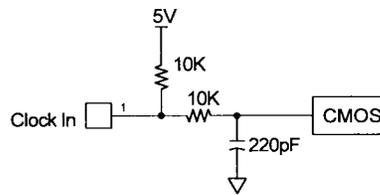



Figure 3: Negative Going Clock Input

## Adjusting Kick Current

By following the silkscreen instructions on the cover, use a small screwdriver to adjust the potentiometer. Line up the potentiometer's arrow to the number corresponding to the motors rated current (amps/phase).

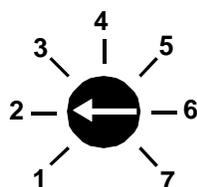

Example 1: 23D104 Motor, Set to 2.0A.

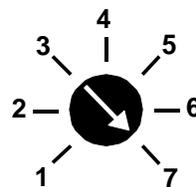

Example 2: 34D314 Motor, Set to 7.0A.

## Motor ON/OFF Input

The motor on/off input allows de-energizing a motor without disturbing the positioning logic. After re-energizing the motor, a routine can continue. This reduces motor heating and conserves power, especially in applications where motors are stopped for long periods and no holding torque is required. If holding torque is required (such as when lifting a load vertically), then the motor must stay energized.

## Jumper Functions/Locations

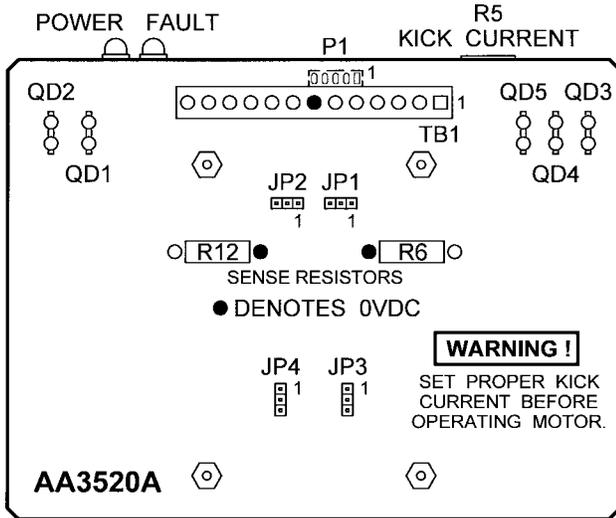


Figure 4: Jumper Locations

Function	JP1	JP2	JP3	JP4
Negative Going Clocks	1-2	x	x	x
Positive Going Clocks	2-3	x	x	x
Terminal 5 = CCW	x	1-2	x	x
Terminal 5 = Direction	x	2-3	x	x
Small Motor	x	x	1-2	x
Large Motor	x	x	2-3	x
Standard Short Circuit Protection	x	x	x	1-2
Desensitized Short Circuit Protection	x	x	x	2-3
Standard Product	1-2	2-3	1-2	1-2

Table 1: Jumper Settings

## Fault Protection

There are 2 types of fault detection. When a fault is detected, the driver turns off the motor current, pulls the Fault Out output low (0V), and the red Fault LED indicates which type of fault occurred. See the Troubleshooting section for more information.

Fault Indications	
1	LED - Slow Blink Shorted wire in the motor or cable.
2	LED - Fast Blink Open wire in the motor or cable.

Table 2: Fault LED

If the driver goes into a fault condition, the fault may be reset by turning the power OFF for at least 15 seconds or by pulling the RESET FAULT input (terminal 4) to a logic "0" for at least 100ms.

## Motor Connections

Figure 5 is a hookup diagram for typical BLHV driver applications. *Input connections must be separated from motor connections and all other possible sources of interference.*

**IMPORTANT NOTE:** If the motor cable between the driver and the step motor extends beyond 25 feet, consult the factory.

# Hook-Up Drawing


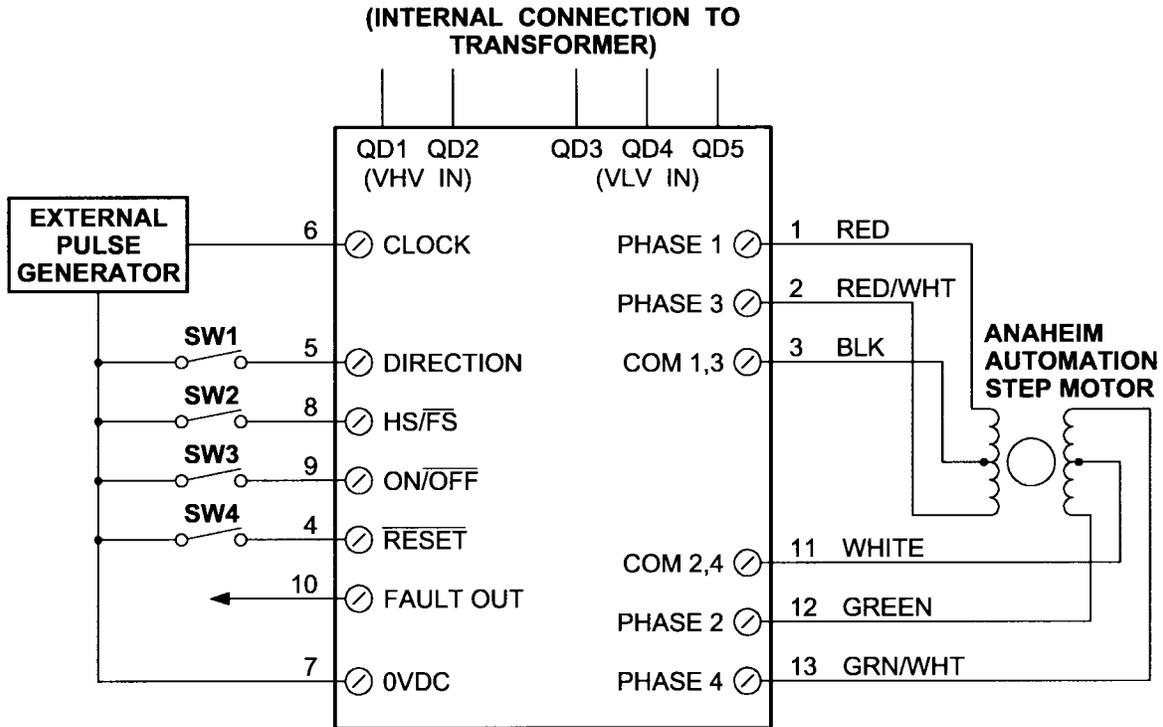


Figure 5: Typical Hook-Up for Clockwise and Direction Option and Motor Wiring.


## Power Supply Requirements

The DPBHV001 and DPZHV002 are both powered by the AC line voltage ranging from 90-265VAC. The following figure shows the various line voltages.

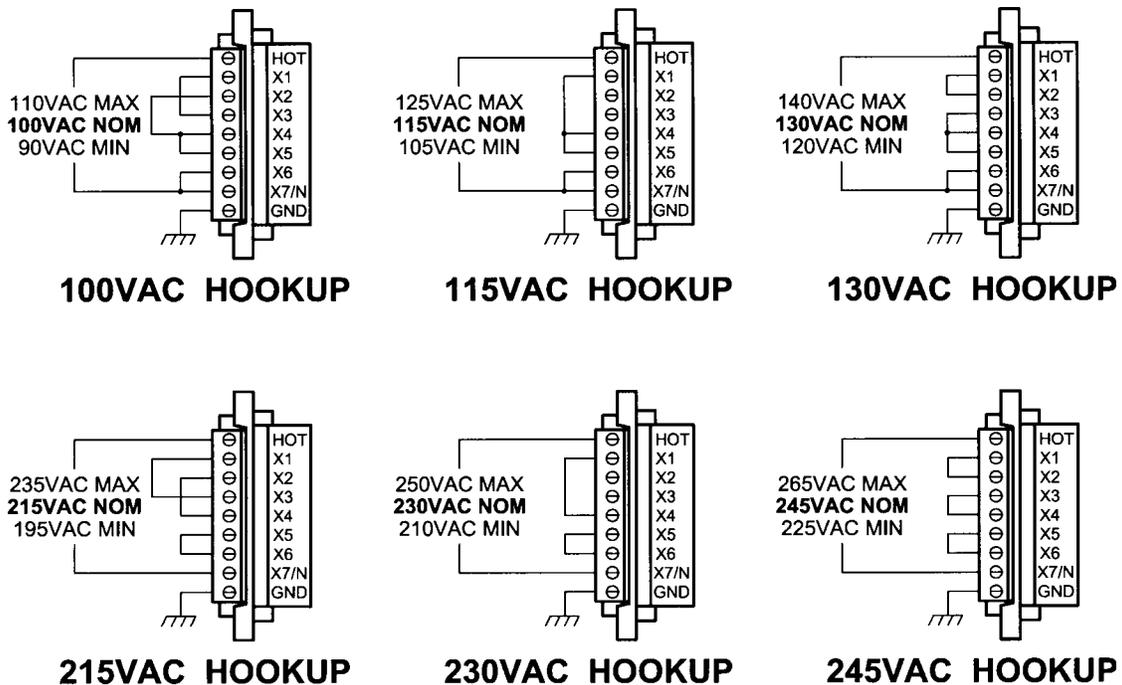


# Dimensions Drawings

## DPBHV001- Single Axis Driver Pack

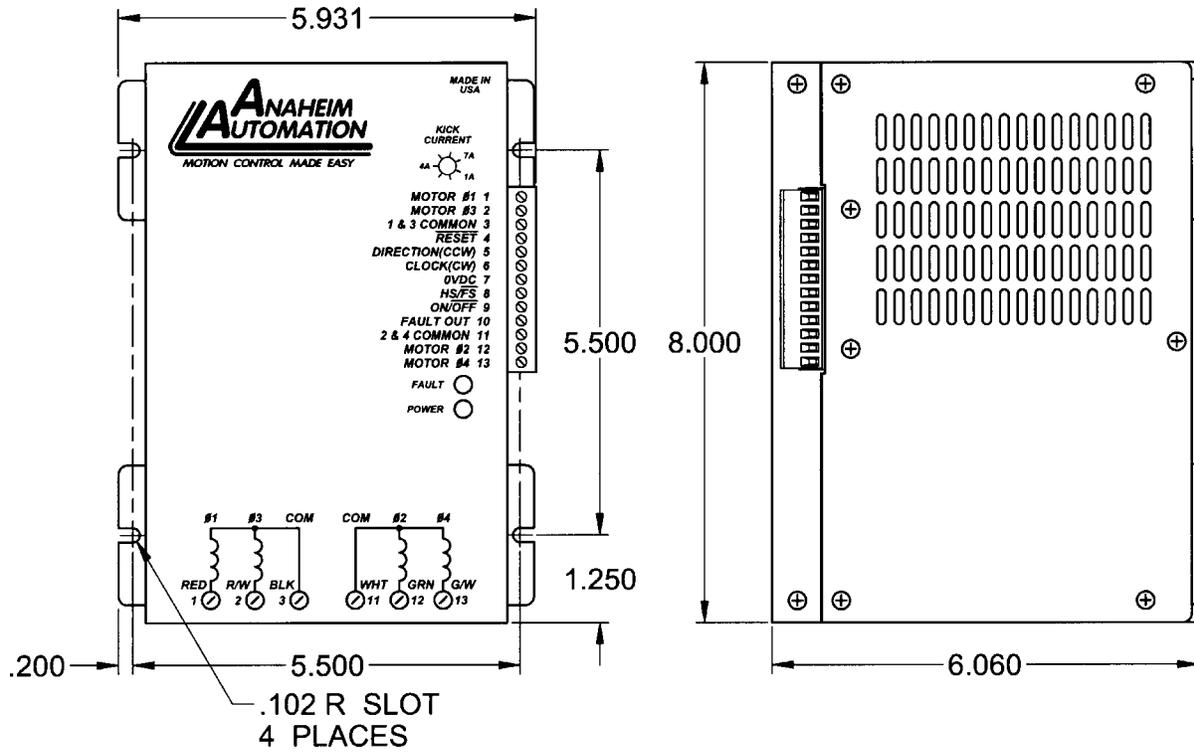

## DPZHV002- Dual Axis Driver Pack

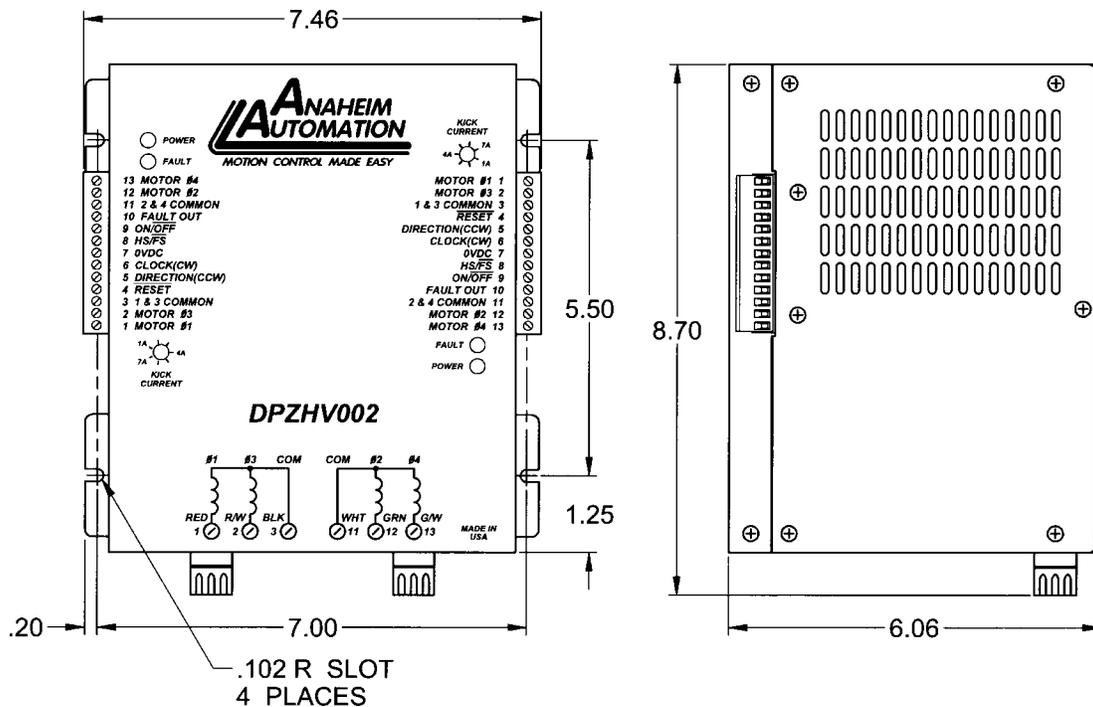

## 13 Pin Terminal Description

Terminal	Description
1	Motor, Phase 1
2	Motor, Phase 3
3	Motor, Common 1, 3
4	Fault Reset
5	Direction (CCW)
6	Clock (CW)
7	0VDC
8	Half-Step/Full Step
9	On/Off
10	Fault Out
11	Motor, Common 2, 4
12	Motor, Phase 2
13	Motor, Phase 4

Table 3

## Motor Compatibility

Standard Motors	
Part Number	Unipolar Rating
23D104_	2.0A
23D108_	4.0A
23D209_	4.5A
23D309_	4.5A
34D106_	3.0A
34D109_	4.5A
34D207_	3.5A
34D213_	6.5A
34D314_	7.0A
42D112_	6.0A
42D212_	6.0A

Table 4

High Torque Motors	
Part Number	Unipolar Rating
23L206_	3.0A
23L210_	5.0A
23L306_	3.0A
23L310_	5.0A
34N108_	4.0A
34N112_	6.0A
34N207_	3.5A
34N214_	7.0A
34N307_	3.5A
34N314_	7.0A
42N115_	7.5A

Table 5

Add suffix "S" for single-ended shaft, or suffix "D" for double-ended shaft.

Notes: Other motors not listed above may be compatible with this driver.

Anaheim Automation carries a full-line of standard and high torque step motors. Contact the factory regarding compatibility. See last two pages for speed/toque curves.

## Specifications

### Control Inputs (All): (Terminals 5, 6, 8, 9)

TTL-compatible

Logic "0" - 0 to 0.8 V

Logic "1" - 3.5 to 5.0 V

### Fault Reset: (Terminal 4)

Pulled up to +5VDC through a 10k Ohm

Logic "1" (open) - Driver enabled and Fault detection enabled

Logic "0" - Resets a Fault condition (driver is disabled when this input is low). This input must be held low for at least 100ms.

### Clock Inputs: (Terminals 5 and 6)

Pulse required; 15 microseconds minimum. The clock input is pulled up/down internally to +5VDC/ 0VDC through a 10k Ohm resistor, based upon JP2 selection.

### Direction Control: (Terminal 5)

Pulled up to +5VDC through a 10k Ohm

Logic "1" (open) - CW

Logic "0" - CCW

### Excitation Mode Select: (Terminal 8)

Pulled up to +5VDC through a 10k Ohm

Logic "1" (open) - Half-step

Logic "0" - 2 Phase Full-step

### Power ON/OFF: (Terminal 9)

Logic "1" (open) - motor current on

Logic "0" - motor current off

### Fault Output: (Terminal 10)

This output is an open drain output, capable of standing off 50 volts and sinking 150mA. This output is pulled to ground when a fault occurs.

### Output Current Rating:

#### (Terminals 1, 2, 3, 11, 12, and 13)

10 Amps/phase maximum operating current, 7.0 Amps/phase maximum standstill current, over the operating voltage and temperature range. Motor phase ratings of 1.0 Amp minimum are required to meet the minimum kick level.

## Troubleshooting

If a Fault occurs, reset the Fault by applying a logic “0” to the Reset Fault Input (terminal 4) for at least 100ms (or by cycling power OFF for at least 15 seconds). After resetting, try to run the motor again. If the driver faults again then check the conditions listed below.

### Is the LED blinking slowly? (once a second)

This indicates that the motor has a phase shorted or there is a short in the motor cable or wiring. Check the motor and the wiring for shorts. If the driver continues to sense “shorts” after the motor and wiring are determined to be accurate, then the output transistors should be checked (see below).

### Is the LED blinking quickly? (three times a second)

This indicates that there is an open or intermittent connection in one of the motor wires. Check the motor and the wiring for opens. Another condition that may cause this type of fault, is when a large motor is ramped down too quickly so that it loses its positioning.

## Checking Output Transistors

1. Set the multimeter to Diode Test
2. Place the RED meter lead on 0VDC (Terminal 7)
3. Touch the black meter lead to each phase (terminals 1, 2, 12, and 13)
4. Reading should be between 0.450V and 0.550V
5. If any readings are significantly less than 0.450V, then the unit has been damaged.

If a factory repair is required, contact Anaheim Automations for an RMA#.

(800) 345-9401 or (714) 992-6990

---

### COPYRIGHT

Copyright 2001 by Anaheim Automation. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual, or otherwise, without the prior written permission of Anaheim Automation, 910 E. Orangefair Lane, Anaheim, CA 92801.

### DISCLAIMER

Though every effort has been made to supply complete and accurate information in this manual, the contents are subject to change without notice or obligation to inform the buyer. **In no event will Anaheim Automation be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation.**

Anaheim Automation's general policy does not recommend the use of its' products in life support applications wherein a failure or malfunction of the product may directly threaten life or injury. Per Anaheim Automation's Terms and Conditions, the user of Anaheim Automation products in life support applications assumes all risks of such use and indemnifies Anaheim Automation against all damages.

### LIMITED WARRANTY

All Anaheim Automation products are warranted against defects in workmanship, materials and construction, when used under Normal Operating Conditions and when used in accordance with specifications. This warranty shall be in effect for a period of twelve months from the date of purchase or eighteen months from the date of manufacture, whichever comes first. **Warranty provisions may be voided if products are subjected to physical modifications, damage, abuse, or misuse.**


Anaheim Automation will repair or replace at its' option, any product which has been found to be defective and is within the warranty period, provided that the item is shipped freight prepaid, with previous authorization (RMA#) to Anaheim Automation's plant in Anaheim, California.

### TECHNICAL SUPPORT


If you should require technical support or if you have problems using any of the equipment covered by this manual, please read the manual completely to see if it will answer the questions you have. Be sure to refer to the TROUBLESHOOTING section of this manual. If you need assistance beyond what this manual can provide, contact your Local Distributor where you purchased the unit, or contact the factory direct.

# Torque Speed Curves


**BLHV Series with 34D209 and 34D311**

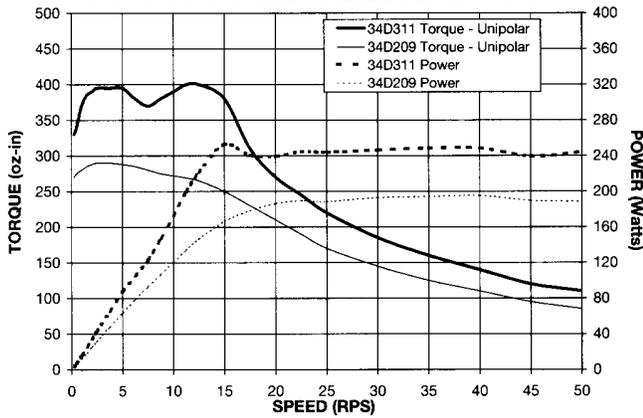


**BLHV Series with 34D307 and 34D314**

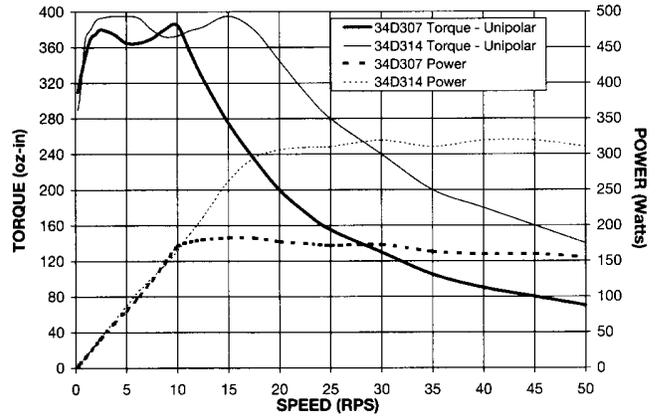


**BLHV Series with 34N214 and 34N314**

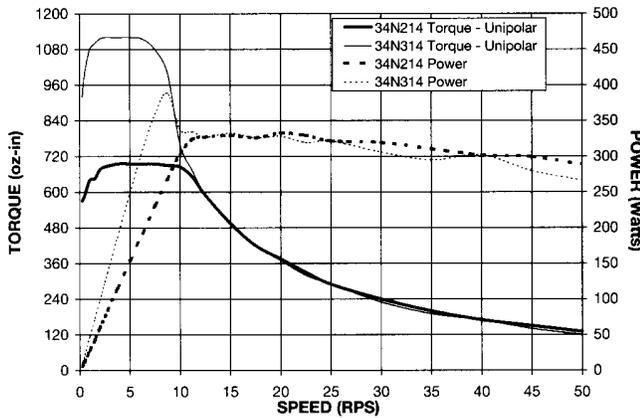


**BLHV Series with 34N307 and 42N112**

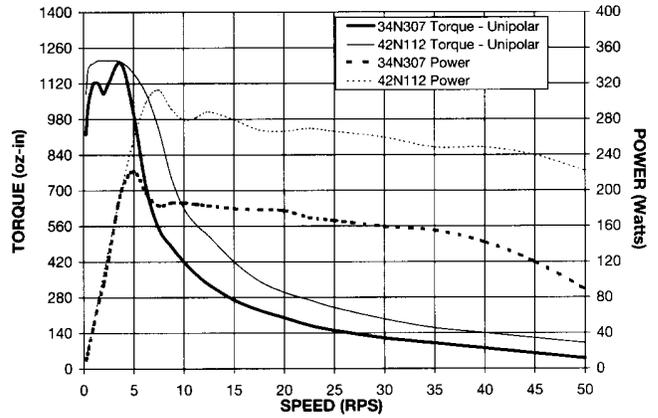

**BLHV Series with 42D112 and 42D212**

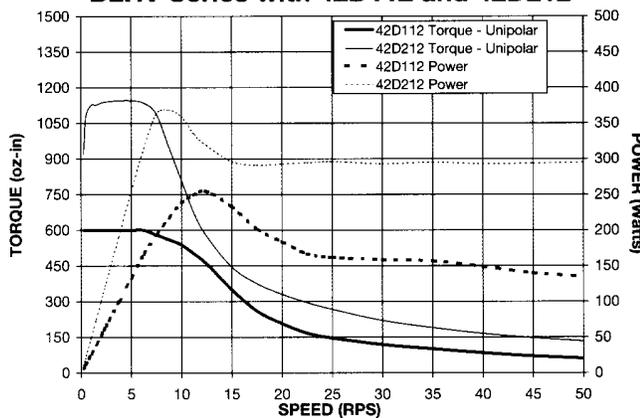


**BLHV Series with 42N115 and 42N214**

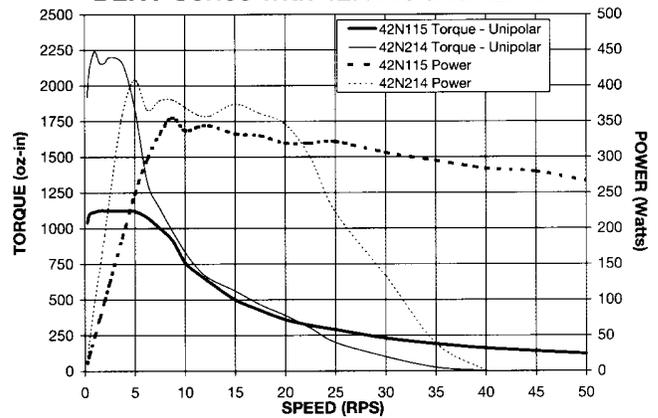


# Torque Speed Curves


**BLHV Series with 23L108 and 23L210**

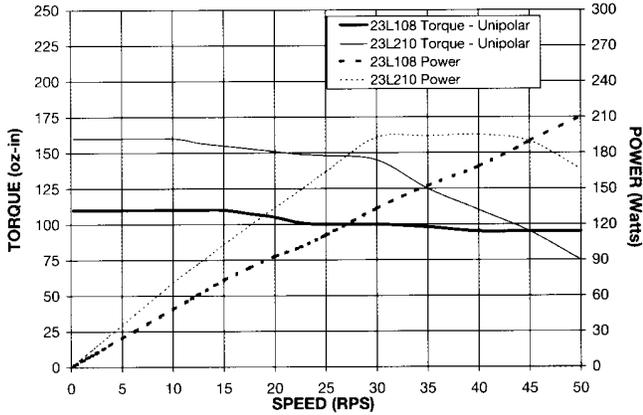


**BLHV Series with 23D108 and 23D209**

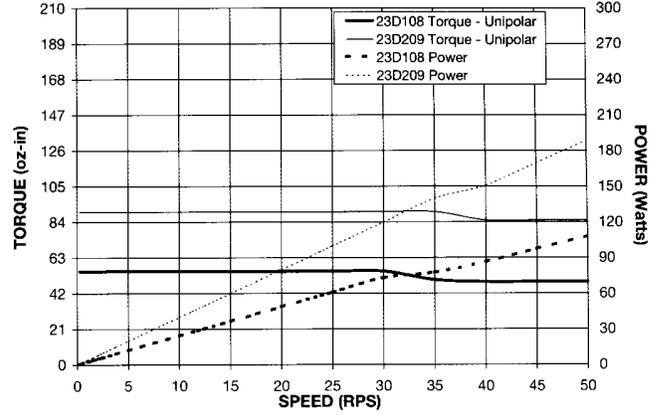


**BLHV Series with 23L310 and 34N112**

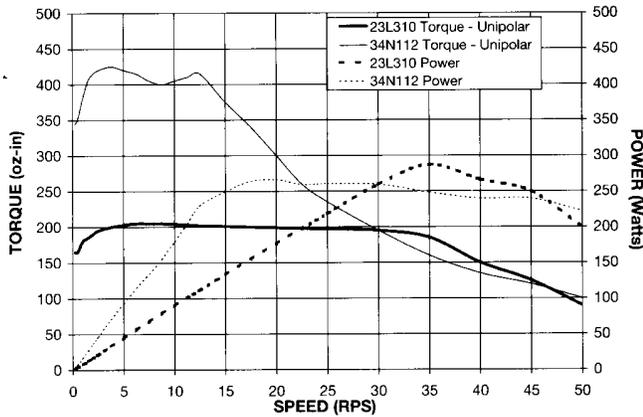


**BLHV Series with 23D306 and 23D309**

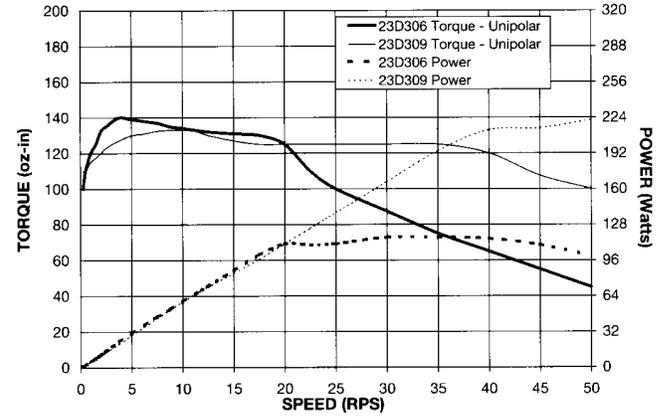

**BLHV Series with 34D106 and 34D109**

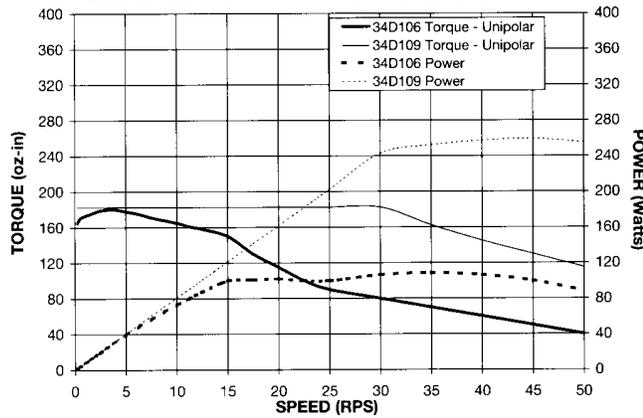

**BLHV Series with 34N108 and 34N207**

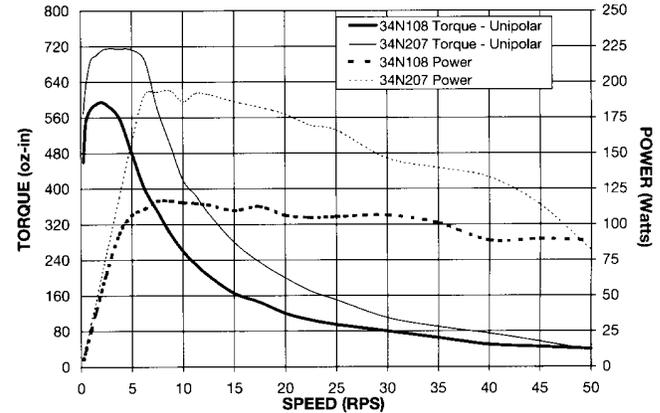

# *ANAHEIM AUTOMATION*