

MBL600

Bilevel Step Motor Driver

User's Guide



ANAHEIM AUTOMATION

4985 E. Landon Drive Anaheim, CA 92807
e-mail: info@anaheimautomation.com

(714) 992-6990 fax: (714) 992-0471
website: www.anaheimautomation.com

MBL600 Features

- 10 Amperes/Phase Maximum Operating Current
- 7 Amperes/Phase Standstill Motor Current
- Half-Step and Full-Step Operation
- Bilevel Drive Operation
- No RFI or EMI Problems
- TTL/CMOS Compatible Inputs
- Clock and Direction or Dual Clock Operation
- Motor Turn-Off Input
- Compact and Rugged

General Description

The ANAHEIM AUTOMATION MBL600 is an improved version of the MBL628-B series step motor drivers. The MBL600 with its compactness and attractive rugged package style employs bilevel (or dual voltage) drive technique for high performance operation of step motors providing significantly improved motor speed torque output. *New features include selectable “+” or “-” going clock inputs, transient voltage protection, and improved Full-step operation.*

Bilevel Drive

The basic function of a step motor driver is to control the motor winding currents. Motor performance is determined by how fast the driver can increase and decrease the winding currents. A rapid rise in winding current is achieved by applying a high voltage directly to a motor. This rapid rise of current is also referred to as the “kick” or operating current. When a desired current level is reached, a low voltage is applied to maintain a suitable holding current level. When a motor winding is turned off, a rapid decrease in winding current is achieved by routing the energy in the collapsing field back to the power supply through a high voltage path. The high voltage supply furnishes the energy necessary to maintain motor output torque at high step rates thus providing high mechanical power output. The low voltage supply provides much of the current needed at low step rates and all of the holding current.

Excitation Mode Option

Users have a choice of dual-phase, full-step operation or half-step operation. Dual-phase, full-step operation occurs by energizing two phases at a time, rotating a typical motor 1.8° per step. Half-step operation occurs by alternately energizing one, and then two, phases at a time, rotating the motor 0.9° per step. Half-step is the recommended mode of operation. Full-Step operation is only suggested for applications that specifically require that mode, such as when retrofitting existing full-step systems.

Step and Direction Control

The MBL600 has two clock options: Clock and Direction, or Dual Clock operation. Terminal 5 can be configured as the Direction Input or CCW Clock Input by placing jumper JP1 in the appropriate position (see Table 1 and Figure 2). Pulses applied to the Clock Input cause the motor to step in the clockwise direction if the Direction Input is a logic “1”, or the counterclockwise direction if the Direction Input is a logic “0”. Pulses applied to the CCW Input cause the motor to step in the counterclockwise direction. Either positive or negative going pulses may be used by setting JP2 to the appropriate position (See Table 1 and Figure 2).

Motor ON/OFF Option

The Motor ON/OFF option allows de-energizing a motor without disturbing the positioning logic. After reenergizing the motor, a routine can continue. This reduces motor heating and conserves power, especially in applications where motors are stopped for long periods and no holding torque is required.

Motor Connections

Hookup diagrams for a motor driver application are presented in Figure 3 and 4. *Wiring connected to input must be separated from motor connections and all other possible sources of interference.*

IMPORTANT NOTE: When the wiring from the driver to the step motor extends beyond 25feet, consult the factory.

Transient Voltage Suppression

Transient Voltage Suppression (TVS) Diodes on the motor phase outputs allow for much longer motor cables to be used. Normally when using long motor cables, voltage transients and spikes are created. These transient often exceed the voltage ratings of the output phase transistors, resulting in blown transistors. The addition of the TVS Diodes suppresses these transients and protect the transistors against damage.

Determining Low-Voltage Supply Level

The Low Voltage (Vlv) supply furnishes the current necessary for holding (standstill) torque and low-speed running torque. Table 2 shows the current ranges for all compatible Anaheim Automation motors. Higher values for the Low Voltage will produce more holding and low-speed torque. A proper Vlv will produce a standstill current that is 65 to 100% of the rated motor current (i.e. for a motor rated at 1 amp, Vlv should be set so that the standstill current is 0.65 to 1 amps).

Verifying Standstill Motor Current

To check the standstill current do the following:

1. Apply power to the driver with motor connected, but do not apply clock pulses.
2. Select Full-Step mode (ground terminal 8 to 0V). This will assure that two phases will be on.
3. Measure the voltage across resistors R1 and R2.
4. Multiply the readings by 20 to calculate the standstill current. (i.e. if the voltage across R1 and R2 reads 0.250V, the standstill current is $0.250 \times 20 = 5.00$ Amps)


Determining High-Voltage Supply Level

The high-voltage supply (Vhv) can range from 24VDC to 70VDC. VHV determines high-speed torque performance and acceleration.

Adjusting Kick Current

By following the silkscreen instructions on the cover of the MBL600 driver, use a small screwdriver to adjust the potentiometer. Line up the arrow to the number corresponding to the motor's rated current (amps/phase).

Dimensions

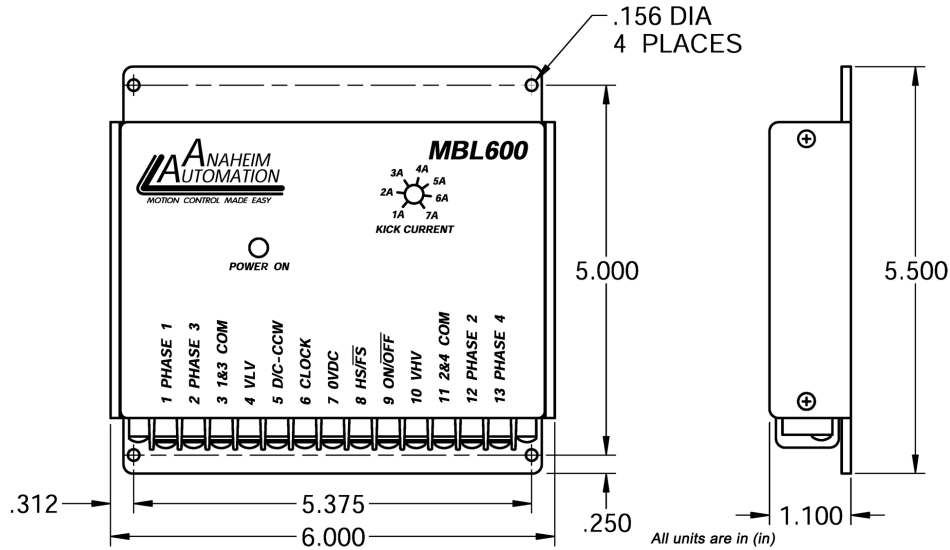


Torque Speed Curves

Torque curves are shown on the back of this specification sheet. This data was obtained using a high voltage (V_hv) of approximately 60VDC no load. The low voltage (V_lv) used was an unregulated voltage of about 5VDC no load. Both voltages dropped when loaded.

To obtain more torque at high speeds, V_hv should be increased. To obtain more torque at standstill and low speeds, V_lv should be increased *but the motor current at standstill should not exceed the motor's rated current.*

Jumper Functions/Locations

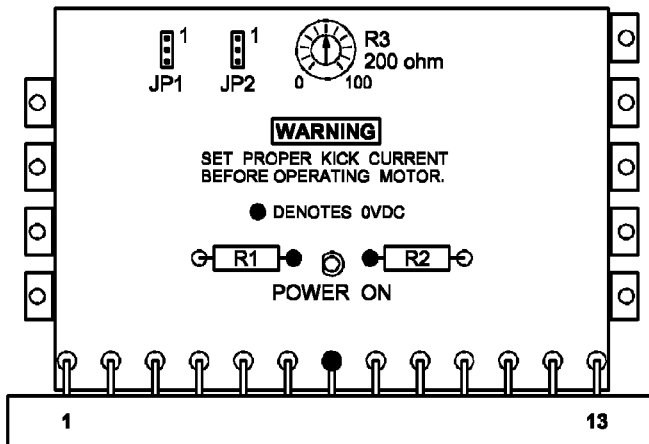

Function	JP1	JP2
Terminal 5 = Direction	2 - 3	X
Terminal 5 = CCW	1 - 2	X
Positive Going Clocks	X	2 - 3
Negative Going Clocks	X	1 - 2
Standard Product	2 - 3	2 - 3



Table 1: Jumpers Settings

X=Don't Care

Motor Part Number	Current Rating (Amps)	VLV Range
23D102	1.0	4.5V - 7.0V
23D104	2.0	3.5V - 5.2V
23D108	3.9	2.5V - 3.3V
23D204	1.8	4.1V - 6.2V
23D209	4.7	2.7V - 3.7V
23D306	2.9	4.0V - 5.9V
23D309	4.6	3.2V - 4.5V
34D106	3.0	3.3V - 4.8V
34D109	4.8	2.7V - 3.8V
34D207	3.5	4.0V - 6.2V
34D209	4.6	3.3V - 4.7V
34D213	6.8	3.2V - 4.5V
34D307	3.5	4.0V - 6.0V
34D311	5.5	3.6V - 5.3V
34D314	7.0	3.4V - 4.9V
42D112	6.1	2.9V - 4.0V
42D212	6.1	4.1V - 6.1V

Table 2: Low Voltage Values for Anaheim Automation Step Motors.

Wiring Diagrams

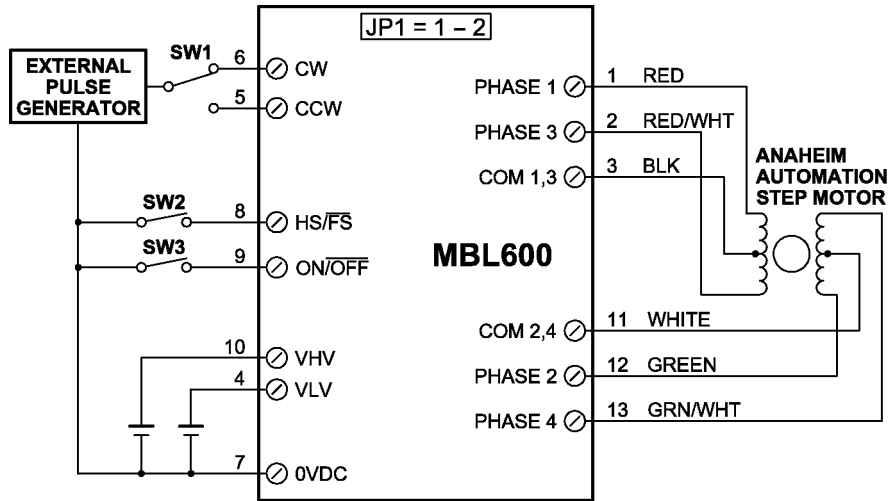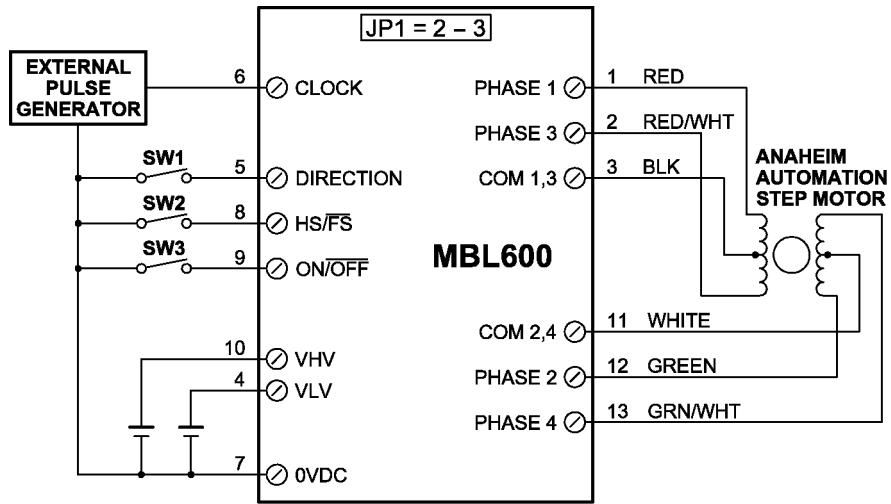

Specifications

Control Inputs:

TTL-Compatible

Logic "0" - 0 to 0.8V

Logic "1" - 3.5 to 5.0V

Clock Inputs: (Terminals 5 & 6)

Pulse Required; 15 microseconds minimum. The clock input is pulled up internally to +5VDC through a 10K Ω resistor for negative going clock inputs or pulled down to 0VDC through a 10K Ω resistor for positive going clock inputs.

Direction Control: (Terminal 5)

Logic "1" (open) - Clockwise

Logic "0" - Counterclockwise

Excitation Mode Select: (Terminal 8)

Logic "1" - Half-Step

Logic "0" - Full-Step

Power ON/OFF: (Terminal 9)

Logic "1" (open) - Motor current on

Logic "0" - Motor current off

Output Current Rating: (Terminals 1, 2, 3, 11, 12 & 13)

6.5Amps per Phase, maximum, over the operating voltage and temperature range. Motor phase ratings of 1.0 Amp minimum are required to meet the minimum kick level.

Power Requirements:

Low-voltage supply (V_{lv}) typically ranges between 3.5 and 6.5VDC. The maximum allowable low-voltage is **10VDC** (See paragraph DETERMINING LOW-VOLTAGE SUPPLY LEVEL)

High-Voltage supply (V_{hv}) is 55VDC nominal, 10VDC minimum and, **70VDC maximum**. (See paragraph DETERMINING HIGH-VOLTAGE SUPPLY LEVEL).

Operating Temperature: (0 to 60°C)

It is recommended that the unit be mounted on a larger aluminum plate, or similar heat-conducting structure, whenever possible. This will prevent the driver from overheating and degrading driver reliability. Fan cooling is also recommended whenever possible.

The MBL600 requires a power supply kit. Consult the factory for the best driver, power supply and motor application.

Anaheim Automation offers a color-coded cable for easy step motor hookups.. This 16 gauge, 6 conductor cable is PVC insulated, with color-coded conductors; the same color as the leads on Anaheim Automation step motors (red, red/white, green, green/white, black and white). The cable is shielded, and available in 25 feet increments, Part Number AA129010-S

COPYRIGHT

Copyright 2013 by Anaheim Automation. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual, or otherwise, without the prior written permission of Anaheim Automation, 4985 E Landon Drive, Anaheim, CA 92807.

DISCLAIMER

Though every effort has been made to supply complete and accurate information in this manual, the contents are subject to change without notice or obligation to inform the buyer. **In no event will Anaheim Automation be liable for direct, indirect, special, incidental, or consequential damages arising out of the use or inability to use the product or documentation.**

Anaheim Automation's general policy does not recommend the use of its' products in life support applications wherein a failure or malfunction of the product may directly threaten life or injury. Per Anaheim Automation's Terms and Conditions, the user of Anaheim Automation products in life support applications assumes all risks of such use and indemnifies Anaheim Automation against all damages.

LIMITED WARRANTY

All Anaheim Automation products are warranted against defects in workmanship, materials and construction, when used under Normal Operating Conditions and when used in accordance with specifications. This warranty shall be in effect for a period of twelve months from the date of purchase or eighteen months from the date of manufacture, whichever comes first. **Warranty provisions may be voided if products are subjected to physical modifications, damage, abuse, or misuse.**

Anaheim Automation will repair or replace at its' option, any product which has been found to be defective and is within the warranty period, provided that the item is shipped freight prepaid, with previous authorization (RMA#) to Anaheim Automation's plant in Anaheim, California.

TECHNICAL SUPPORT

If you should require technical support or if you have problems using any of the equipment covered by this manual, please read the manual completely to see if it will answer the questions you have. If you need assistance beyond what this manual can provide, contact your Local Distributor where you purchased the unit, or contact the factory direct.

ANAHEIM AUTOMATION